

WALL PANEL INSTALLATION INSTRUCTION

ledge trim (chair rail mouldings) —————

Faux Stone
Corners

2 1/2" Screws
(apply 8 per
panel)

Touch Up
Paint/Wash



Faux Stone Wall Panel



Sand Finish Caulk/Grout

STEP 1

If the project is an exterior application make sure you use Exterior screws. To mount first panel on accent wall, cut off interlock. If a corner is needed mount first. (pic 1)

STEP 2

Apply a panel by connecting the interlocking keys. Occasionally the keys may require filing or sanding to optimize the fit. (pic 2) Once panel is positioned make sure it is level, (pic 3) then using the proper screws, secure into position. Counter sink 8 screws per panel.

STEP 3

Keep adding panels until you get to the point where a full panel is too large to place between the panel and the corner/end of wall. If a corner is used, cut off the interlock, then measure the distance between, mark on your panel and cut to fit. (pic 4) If a Corner is not used, panels can be very easily mitered for a corner wrap.

STEP 4


If installing a wainscot wall, after you have reached your desired height, install a Chair Rail Moulding on top of the panels. Secure it by placing screws from underneath, then use caulking to cover all screw heads. (pic 5) If completing an accent wall, after your bottom row is placed, start the second row by staggering the seams for most natural look. Repeat all the way to the top. (pic 6)

STEP 5

Once wall panels are all secured, use our magic grout to cover all nail heads and interlocking seams. You can create a more natural looking mortar line by using a small damp bristled paint brush and simply sweep over the grout to smooth out appearance. Let the grout dry about 2 hrs, then use the touch up paint/wash to match.

TOOLS

Circular/Hand/or Jigsaw
Power Drill, Hammer, Level
Pencil, Tape Measure
Caulking Gun, Utility Knife,
Exterior or Interior Screws

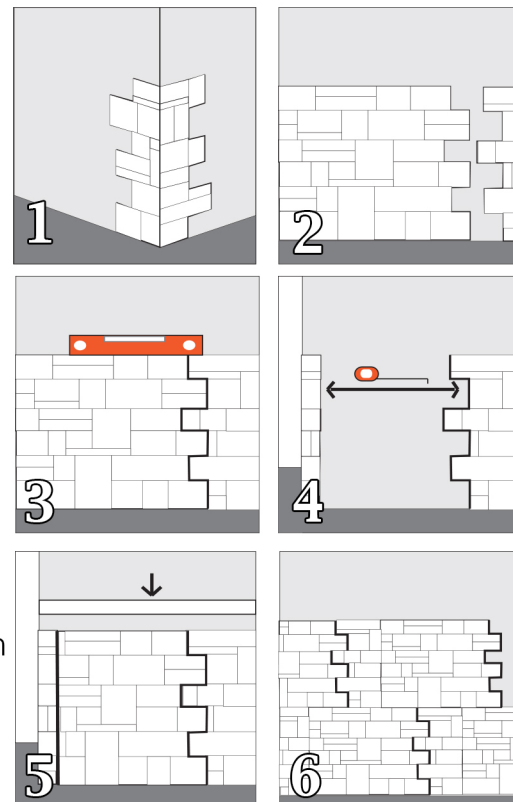

WWW.BUYFAUXSTONE.COM

502 NE 43rd st Oakland Park FL 33334 (954)-309-2136